

Initiate IngEstate Procedure for iPP320 & iPP350

1. From Home screen - hold **Pound (#)** and yellow **Clear** key for 2 seconds to reboot
2. When screen says "Initializing" Press green **Enter** key
The top of screen should say "Elavon Sub Menu"
3. Press **Enter** again to **Initiate IngEstate**
4. Allow the pinpad to reboot normally

Initiate IngEstate Procedure for iSC250 & iSC480

1. From Home screen - hold **Minus (-)** and yellow **Clear** key for 2 seconds to reboot
2. When screen says "Initializing" Press green **Enter** key
The top of screen should say "Elavon Sub Menu"
3. Press **Enter** again to **Initiate IngEstate**
4. Allow the pin pad to reboot normally

Initiate IngEstate Procedure for IWL252, IWL258 and IWL250

1. Make sure device is plugged into power supply, either with the power cable or placed on the docking station
2. Reboot device by pressing the **YELLOW** key and the **POUND** key together
3. From Home screen - hold **Pound (#)** and yellow **Clear** key for 2 seconds to reboot
4. When screen says "Initializing" Press green **Enter** key
The top of screen should say "Elavon Sub Menu"
5. Press **Enter** again to **Initiate IngEstate**
5. Allow the pinpad to reboot normally

Initiate IngEstate Procedure for ISMP4

1. Make sure device is plugged into power supply
2. Reboot device by pressing the **YELLOW** key and the **POUND** key together
3. From Home screen - hold **Pound (#)** and yellow **Clear** key for 2 seconds to reboot
4. When screen says "Initializing" Press green **Enter** key

The top of screen should say "Elavon Sub Menu"
5. Press **Enter** again to **Initiate IngEstate**
6. Allow the pinpad to reboot normally